

Use the joystick to select the menu **Auto** **P**

## **TIMER Settings**

Use this function to keep your heating up to a certain temperature for a certain period of time from now.  
 Use the joystick to select the duration of the timer. Note that "01H" means 1 hour and "01d" means 1 day. You can hold down or up the joystick to make the selection more quickly.  
 Press to the right the joystick to validate the duration of the timer.  
 Press the joystick to adjust the temperature.  
 Press the joystick to validate the temperature. The sandtimer should blink, which means that the timer is currently running  
 Press the back key to leave the timer

## **MANUAL Mode - Comfort temperature**

Use this function to manually adjust the temperature of your heating.  
 Use the joystick to adjust the temperature (default value: 20°C)

## **Auto** **AUTO Mode**

If this function is selected, the thermostat will follow the displayed program (default is P1). The program is selected in the program settings.  
 Use the joystick to adjust the temperature temporary. The symbol is then displayed and the temperature will be reset at the end of the current programmed period.

## **MANUAL Mode - Reduced temperature**

Use this function to manually adjust the temperature of your heating  
 Use the joystick to adjust the temperature (default value: 18°C)

## **Date & Time Settings**

Adjust the time using the joystick . Holding down or up the joystick will make the adjustment more quickly, with 15min incrementation.  
 Press the joystick to validate the time. The day should now blink. "1" is for Monday, "2" is for Tuesday etc. Select the right day using the joystick .  
 Press the joystick to validate. The day should now blink. Use the joystick to select the right day, then press the joystick to validate your selection. The month should now blink. Use the joystick to select the right month, then press the joystick to validate your selection. Press a second time the joystick so that the "18" blink. Select the right year using the joystick, then finally press the joystick

## **P** **PROGRAM Settings**

This menu has two functions:  
 1) Selecting the program to be used on the "Auto" mode.  
 2) Editing any programs

The program displayed is the one that will be used on the "Auto" mode. You can change it by using the joystick   
 Note that there are two users program U1 and U2, which the user can edit. There are also 5 built-in programs P1 to P5, which are already set up to be used as follows:

**P1:** Morning, evening & weekend      **P3:** 7h - 19h (office)      **P5:** 8h - 19h (shop)  
**P2:** Morning, noon, evening & weekend      **P4:** Weekend (secondary house)

To edit or view the selected program, press the joystick. See the section on the right to learn how to edit/view a program

## **Keyboard lock and unlock function**


In **Auto**, , , modes only. To lock the key board, maintains the joystick pressed and press the key, then the symbol "0" appears.

To unlock the key board repeat this procedure, (the symbol "0" will disappear)


## **Error codes**

Error on the External (Floor) sensor => **Err** and blink  
 Error on the internal sensor => **Err** and blink

## How can you create or change a user's program (U1 or U2).

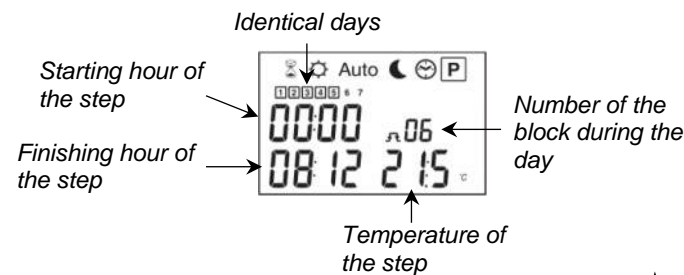

Before, select one of the user's programs **U1** or **U2** by using the joystick

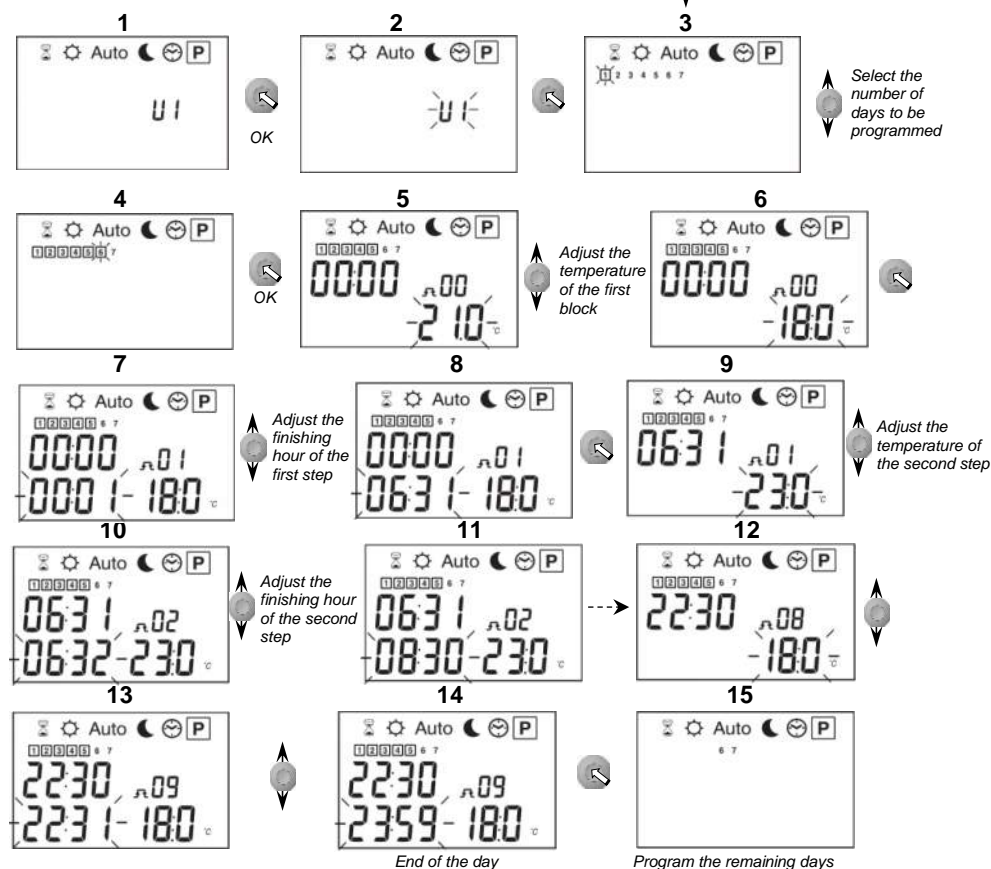

To program the remaining days, repeat step « 4 » to « 14 » and this for all the days of the week.  
 Once you have run through the whole programming, set the thermostat in the **Auto** mode.

- To leave the program mode **P** without saving press the key.
- In program mode **P** you have the possibility to reset a user program separately (**U1** or **U2**) by pressing the key during a few seconds when you have selected the user program (**U1** or **U2** must be blinking before pressing). When the program is erased "Clr" is displayed.