

## Xthermostat TS 100 - Installer Guide

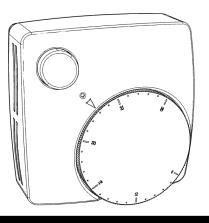




#### **Dimensions**

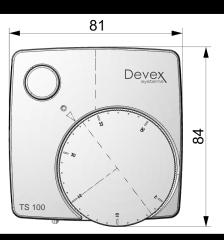

# Technical specifications

Sensing Type	Air / Floor / Air-Floor
Mounting	Surface
Measured temperature precision	± 0.1°C
Operating temperature	0°C - 50°C
Setting temperature range	5°C - 35°C
Floor limiting temperature range	10°C - 40°C
(if set to air / floor sensing)	
Regulation characteristics	Proportional band 10 min for 2°C or Static
	differential 0.5°C
Electricial protection	Class II - IP30
Power supply	230 VAC ± 10%
Output	Relay 16A 250Vac resistive load (AC1)
Optional external floor sensor	NTC - 15 kOhms at 25°C
Software version	V 1.4x

#### **Configuration Switch**

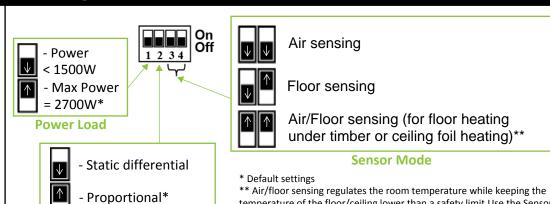


limitation on the external sensor

temperature of the floor/ceiling lower than a safety limit. Use the Sensor limitation potentiometer located on the circuit board to adjust the

## **Mode Description**

- Different modes can be selected using the side toggle.
- The standard mode is the comfort mode. To select it, place the toggle to the sun.
- The night reduction mode is controlled by an external switch wired to the TS100. When ON, the temperature will drop by 4°C
- The programming mode can be used if a timer is wired to the thermostat. In such case, the toggle should be on the clock position.

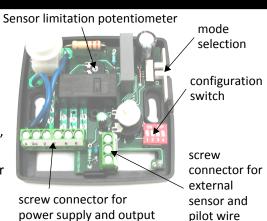

### **Troubleshooting**

**Regulation Mode** 

LED Indicator: Red: Heating

Green: reduction mode by clock (pilot wire)

Orange: Heating during reduction mode by clock (pilot wire)

Green blinking: - 0.5s cycle = External and internal sensor failure

1s cycle = Internal sensor failure2s cycle = External sensor failure

