


INSTRUCTIONS TO BE KEPT BY THE USER OF THE APPLIANCE

Comfortline Original Overhead Heating Panels

CL09, CL12, CL18, CL24, CL30, CL36

INSTALLATION INSTRUCTIONS

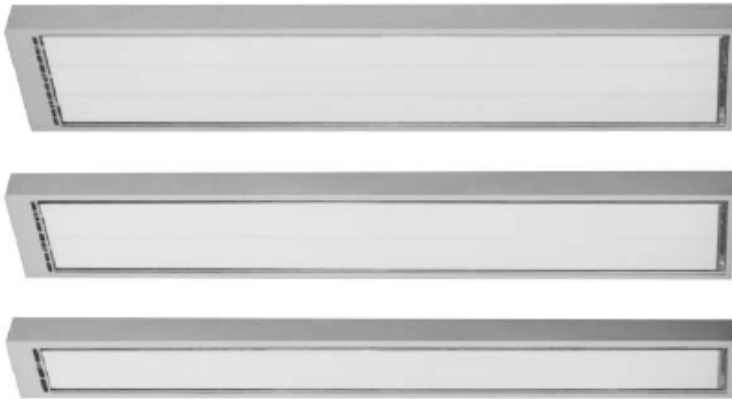


COMFORTLINE®

1. GENERAL INFORMATIONS


- 1.1. Panels are class 1, IPX4.
- 1.2. All heaters must be installed by a Licensed Electrician only in accordance with AS 3000.
- 1.3. It is very important not to touch the heating panels without gloves or clean hands as it is not possible to remove grease or dirt marks without damage to the heating surfaces.
- 1.4. These panels are used for heating larger areas. They are recommended mainly for outdoor areas, industry halls, workshops, storage areas, shops, sports and common halls. They can be used for zone heating of requested areas too.

2. ASSEMBLY


The panels can be suspended on the four fixing points by chain or fixed to a ceiling using the mounting brackets provided. The mounting brackets can be fixed to the panel using a screw or cable tie to provide extra security against accidental removal.

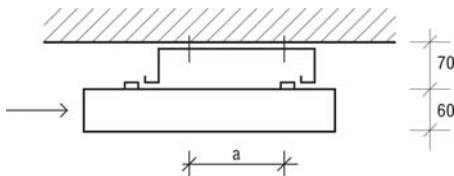

TYPE	a
CL 09	35
CL 12	35
CL 18	140
CL 24	140
CL 30	140
CL 36	140

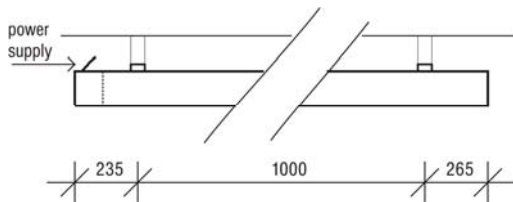

Recommended installation Dimensions (mm)




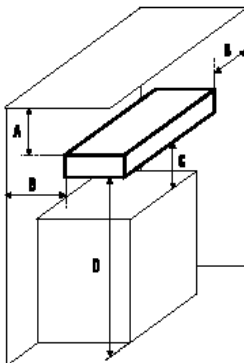


TYPE	A	B	C	D
CL 09	70	150	500	2400
CL 12	70	150	500	2400
CL 18	70	150	500	2400
CL 24	70	150	500	2400
CL 30	70	200	1000	3500
CL 36	70	200	1000	3500

3. ELECTRIC CONNECTION

The elements are rated to 240 Volts.

The supply cable and circuit breaker protection must be of a suitable rating.

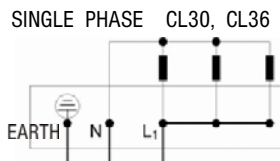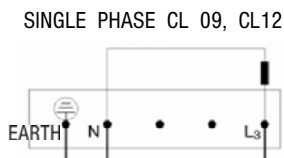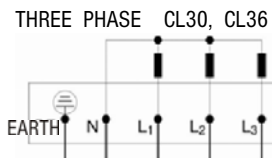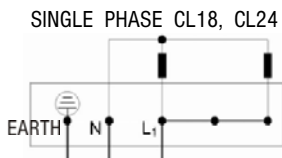

4. CONTROL

Control system should be of such a type as to ensure that the installed panels are operated correctly. It is recommended that a thermostat incorporating a timer should be used.

Thermostats would require connection by a relay or contactor. For large areas and installations, it is possible to utilise a microprocessor control system.

COMFORTLINE CL30 - CL36 panels may be operated by switching of the individual sections as follows; it is possible to control by switching off the single sections.

First step - middle section only,

Second step - both outer sections,

Third step - all sections on.

The Comfortline CL18 and CL 24 panels can also be operated by switching of the individual sections.

5. MAINTENANCE

It is possible to clean the body of heating panel by using a gentle brush and detergent. Do not clean the radiant surface of the panel, as cleaning may cause damage.

6. TECHNICAL CHARACTERISTICS

TYPE	INPUT (W)	VOLTAGE (V)	CLASS OF PROTECTION	IP	DIMENSIONS (mm)	WEIGHT (kg)
CL 09	900	240 V	I	IP X4	1500x155x60	8,5
CL 12	1200	240 V	I	IP X4	1500x155x60	8,5
CL 18	2000	240 V	I	IP X4	1500x256x60	13,5
CL 24	2400	240 V	I	IP X4	1500x256x60	13,5
CL 30	3300	415 V	I	IP X4	1500x357x60	18
CL 36	3600	415 V	I	IP X4	1500x357x60	18

7. NOTICE

It is very important not to touch the heating panels without gloves or clean hands as it is not possible to remove grease or dirt marks without damage to the heating surfaces.

8. GUARANTEE CONDITIONS

The following Warranty provided by Devex Systems ABN 39 898 434 262, is offered in addition to any relevant statutory Federal or State Warranty. Devex Systems warrants the Comfortline Original model for a period of 2 years.

Devex Systems warrants its product against defects in material, manufacture, or workmanship. Proof of purchase must be provided. Installations must be carried out in accordance with the instructions supplied and must be installed by a licensed electrician. An authorised Devex Systems representative must be given the opportunity to inspect and report on the defect. The obligation of Devex Systems is to repair or replace the defective product only free of charge to the customer. The faulty product must be returned to the place of purchase, or to Devex Systems, where Devex Systems reserves the right to repair or replace the unit at no cost within a reasonable period of time.

This Warranty does not cover faults caused by incorrect installation, damage by others, misuse, lightning, or, incorrect design by others or where payment is in default. Rectification work, performed as a consequence of matters not covered by the Warranty, or on an installation, will be at the expense of the customer. The Warranty is void, if payment of the equipment is in default. At all times, we at Devex Systems will respond honestly, efficiently and promptly to all queries and reasonable requests from our customers.

COMFORTLINE®

Head Office

Telephone (02) 9997 2811

Facsimile (02) 9997 7852

Freecall 1 800 636 091

Victorian Office

Telephone (03) 5986 7388

Facsimile (03) 5986 7399

Tasmanian Office

Telephone (03) 6273 9122

Facsimile (03) 6273 9120